

ASSEMBLY INSTRUCTIONS

ITEM NO: FX-3815-9

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

* THESE INSTRUCTIONS ARE PROVIDED FOR YOUR SAFETY PURPOSE AND IT IS VERY IMPORTANT THAT THEY ARE READ COMPLETELY BEFORE BEGINNING INSTALLATION OF YOUR FIXTURE.*

DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/CIRCUIT BREAKER.

1. JOIN THE CHAINS (G) TO THE COLLAR LOOP(E) AND FIXTURE BODY (K) WITH CONNECTERS (F).

2. AFFIX MOUNTING BAR (A) TO JUNCTION BOX WITH MOUNTING SCREW (B).


3. PUT THE WIRES THROUGH THE CANOPY (D) AND MOUNTING STRIP(A) AND MAKE WIRE CONNECTIONS:CONNECT THE GREEN GROUND WIRE "⊥" TO THE SUPPLY WIRE, CATHODE WIRE "N" IN WHITE TO THE SUPPLY WIRE, ANODE WIRE "L" IN BLACK TO THE SUPPLY WIRE IN THE JUNCTION BOX AS ILLUSTRATED WITH WIRE NUTS.

4. ATTACH THE CANOPY (D) TO THE MOUNTING BAR (A) AND TIGHTEN WITH SIDE SCREWS (C).

5. INSTALL RECOMMENDED BULBS (NOT INCLUDED IN THIS PACKAGE).

6. SCREW GLASS SHADE (H) CLOCKWISE TO THE FIXTURE BODY(K).

TURN OF POWER AND ENJOY!

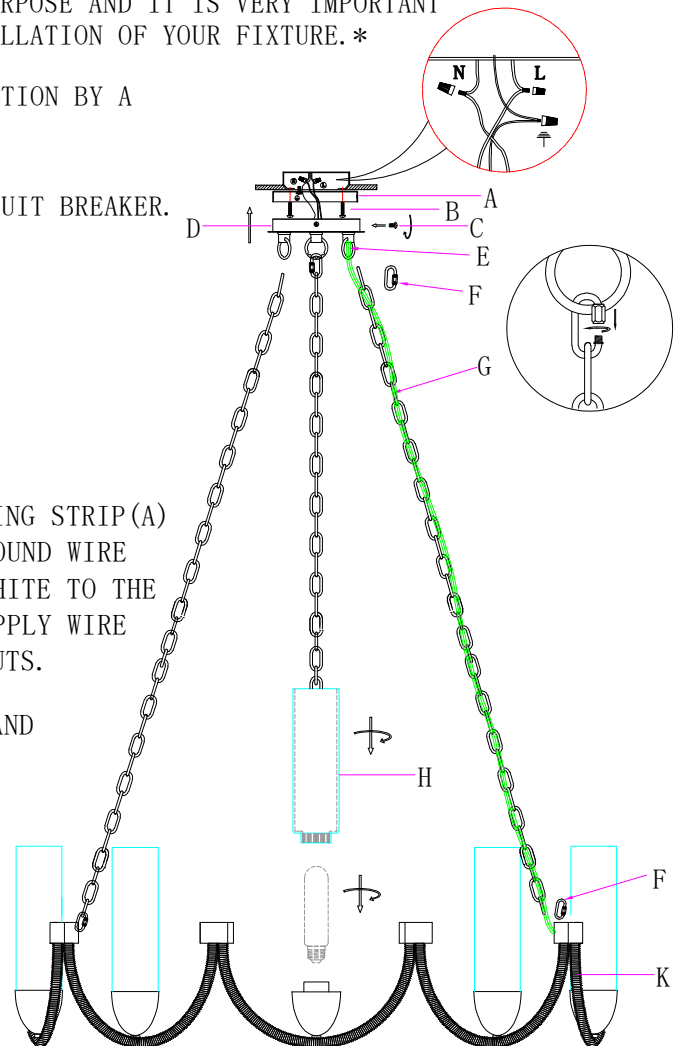

TO REPLACE THE BULB:

TURN OFF POWER (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB(S), MAKING SURE THE BULB(S) HAVE SUFFICIENT TIME TO COOL DOWN.

**USE MAX 60WX9 TYPE T
BULB (BULBS NOT INCLUDED)**

DO NOT SUBJECT THIS FIXTURE TO ANY SHOCK WHILE LIT AS SHATTERING OF BULBS MAY RESULT.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.